





**FINAL
APPROACH**

THE
**X-Land'r
Hunting Blind**

Instruction booklet

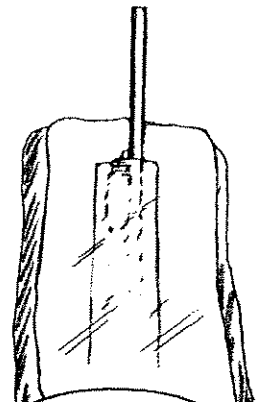

E-Z Carry Gun
Scabbard

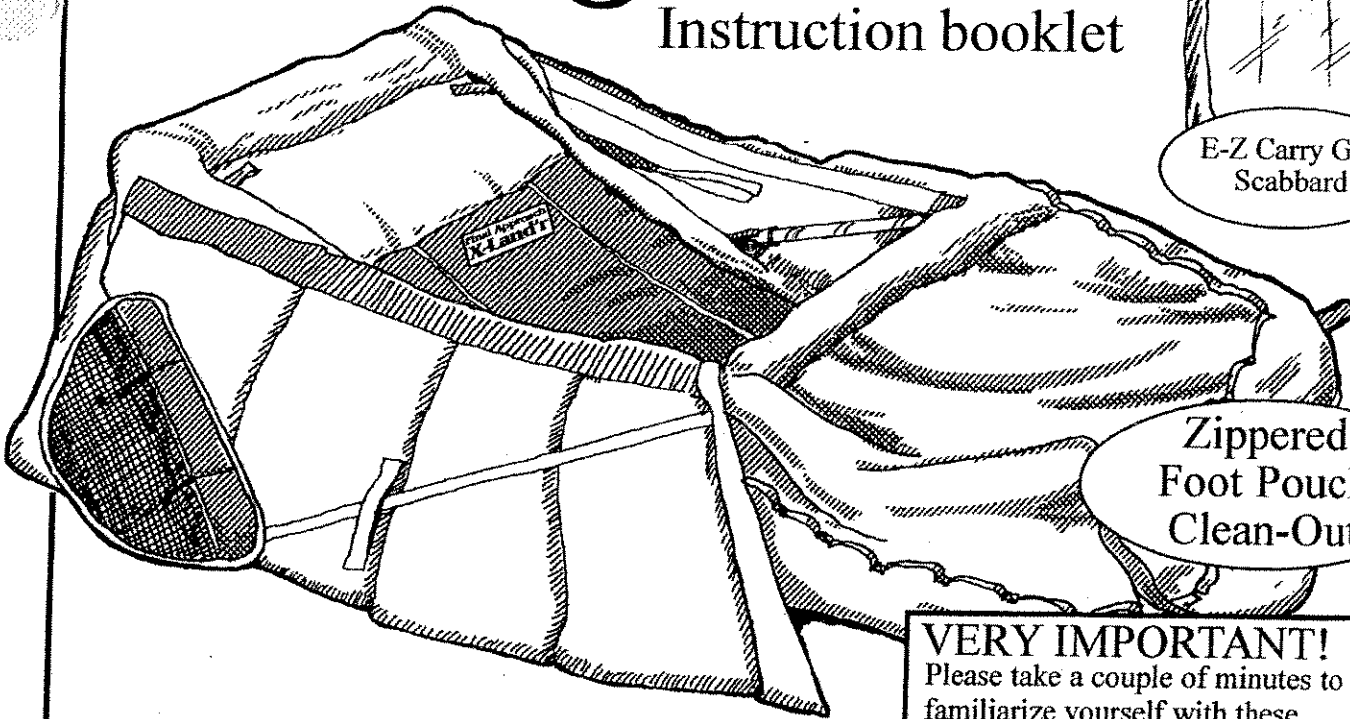

Zippered
Foot Pouch
Clean-Out

VERY IMPORTANT!
Please take a couple of minutes to
familiarize yourself with these
instructions BEFORE you begin to
assemble this blind!

205 N. Depot Street, Fox Lake, WI 53933



Phone: 877-956-5746

Fax: 920-928-3687

E-mail: customerservice@kolpin.com • Web site: www.finalapproachblinds.com

Out Of The Box...One Time Only



When you take your X-Land'r Hunting Blind from the box the Main Frame elements will already be properly installed inside the cover and it will be folded in half as shown at left. A FEW SIMPLE STEPS, requiring one 1/2" (13mm) and one 9/16" (14mm) wrenches is all that is needed to complete the assembly of your X-Land'r Blind.

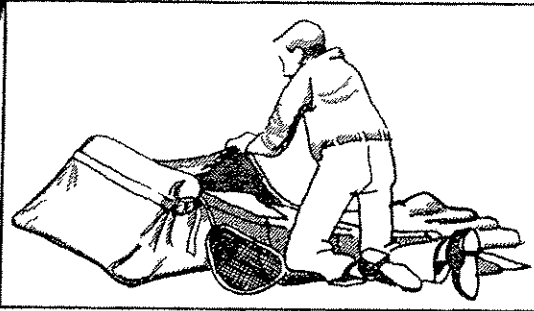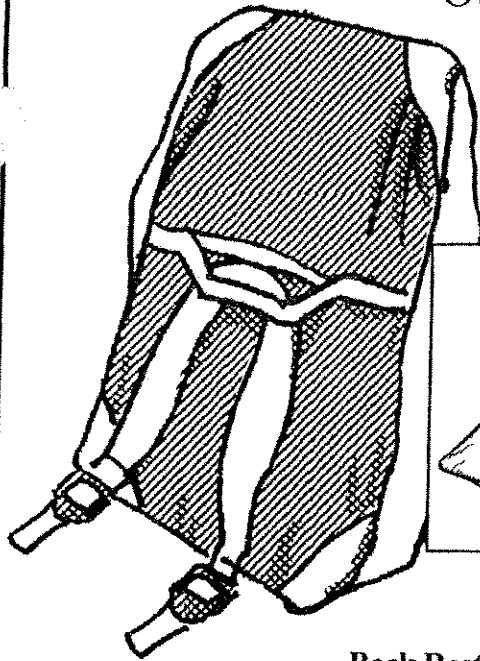

Take A Minute Or Two...

Knowing the terminology used in the instructions will make the task even easier. Spread the Blind out on the floor and lay the lid flaps back as shown. Now look around inside the Blind and under the fabric to see how the frame is situated inside the fabric cover. Use the drawings below to familiarize yourself with the terms used in this instruction booklet.

ALSO: Locate the two Black Nylon Brackets, the ones containing only a bolt. There is one on each side; their location is indicated by the circle on the drawing below and labeled on the exploded frame drawing at the bottom of the page. There is a second Nylon Bracket w/oversized hole for Head Rest Arch Brace. Use U-Shaped Lock Pin to secure this Brace to Bracket. (one on each side of Head Rest end)

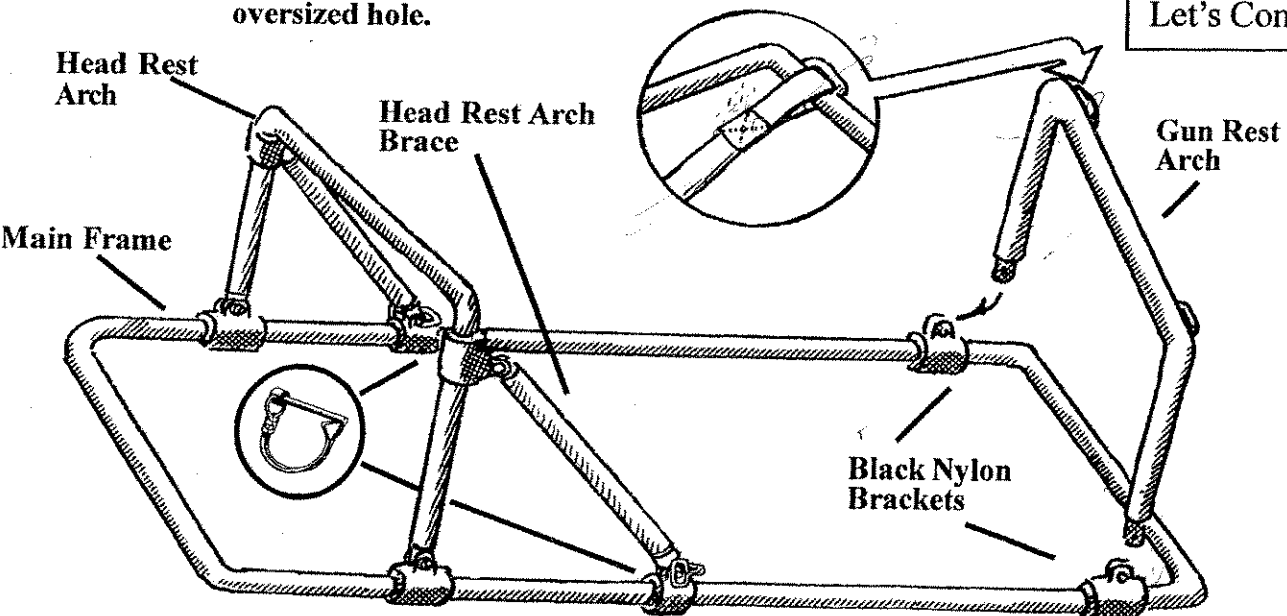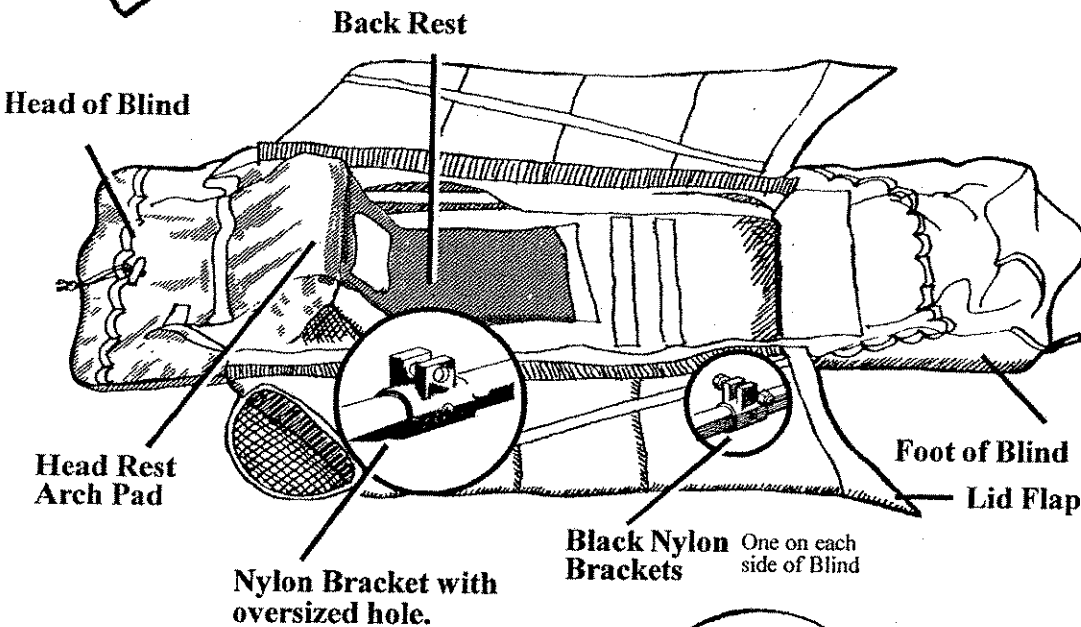

Now that you have familiarized yourself with the terminology, Let's Continue...

THE HEAD REST ARCH

NOTE: The Head Rest Arch will resist your attempts to move it into place because the fabric has been fitted tight to prevent sagging once the blind is fully erected.






Begin by kneeling next to the blind. Firmly hold blind on end with one hand. Use your opposite hand and push down firmly on the Head Rest Arch while alternating from right corner to left corner of Arch until you feel the Arch 'pop' into the erect position (it will be 90° to the Floor Frame).

Do not continue to force the Head Rest Arch any further! The Head Rest Arch will remain in place without further assistance.

Once the Blind is back on the floor, check to be sure that the Head Rest Arch is centered under the Head Rest Arch Pad. If it is not, adjust at this time.

NOTE: Keep Arch in erect position to backpack blind.

There is a Black Nylon Bracket (A) located on the Head Rest End of the Main Frame (one on each side of the Blind with a slit in the fabric next to each one). Use the U-Shaped Lock Pin to attach the Head Rest Brace to the Main Frame. Insert the U-Shape Lock Pin and secure.

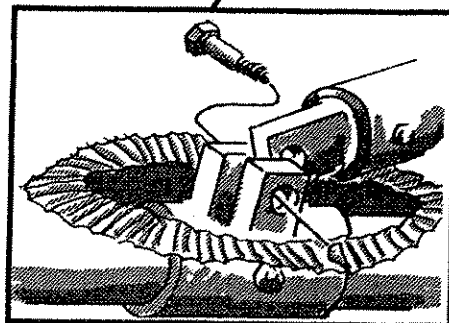
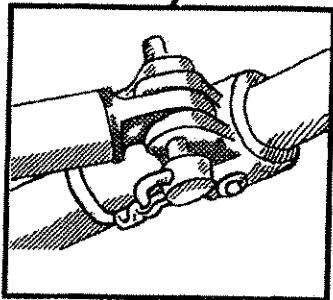
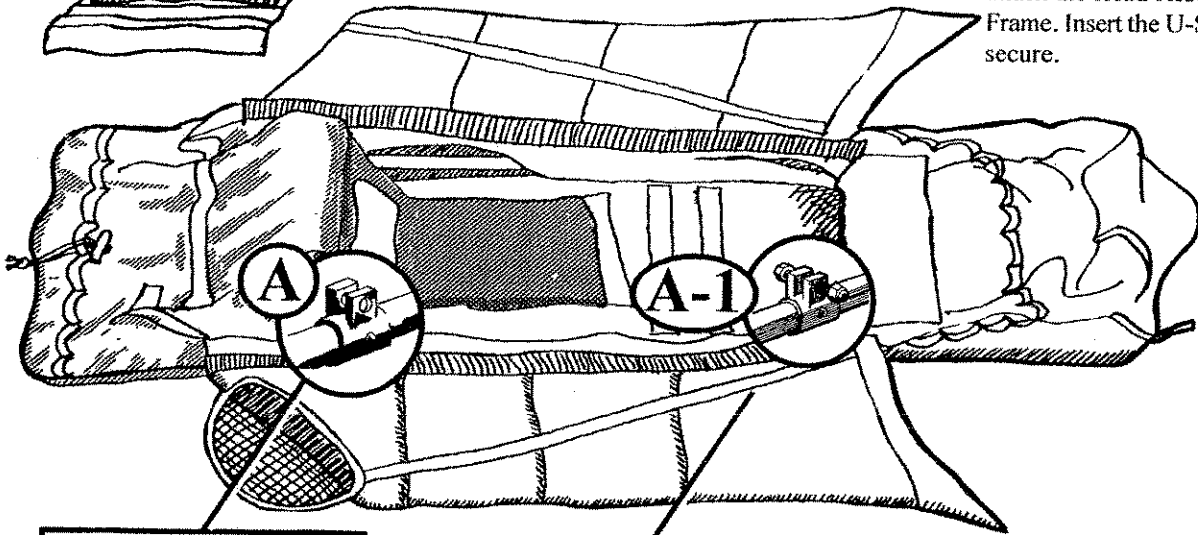


ATTACHING THE GUN REST ARCH

Remove the two bolts from the Black Nylon Brackets (the ones that come up through the fabric) at the Gun Rest End of the Main Frame (A-1) and use them to attach the Gun Rest Arch to the Main Frame. **DO NOT OVERTIGHTEN THE SELF-LOCKING NUTS. THEY WON'T BACK OUT OR WORK LOOSE.**

FINISHING UP

Push the Gun Rest Arch forward toward the foot of the Blind. Fold the Gun Rest Arch Pad around the Gun Rest Arch and secure in place using the Velcro® Strip.

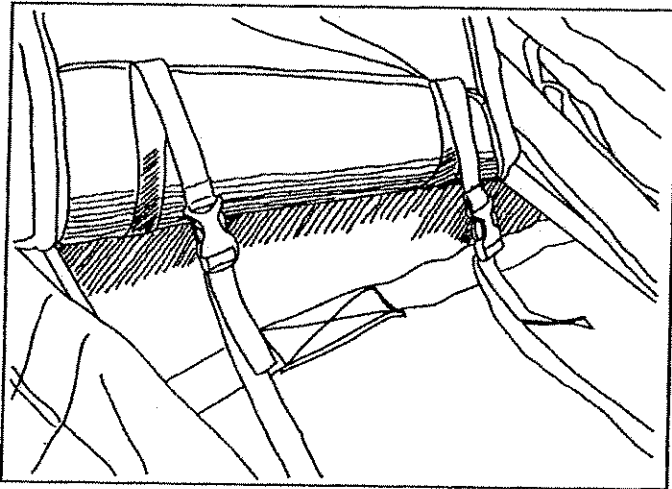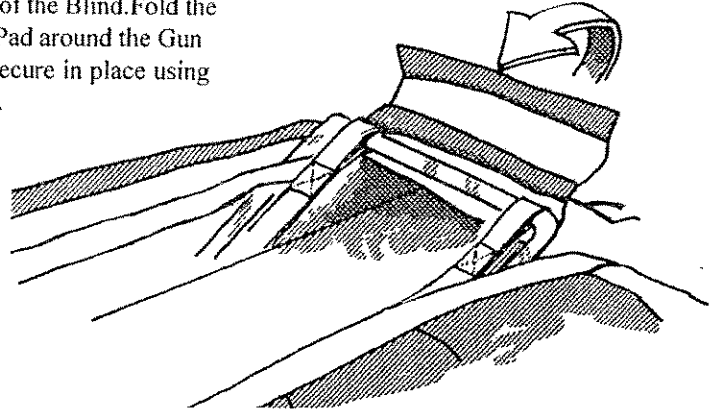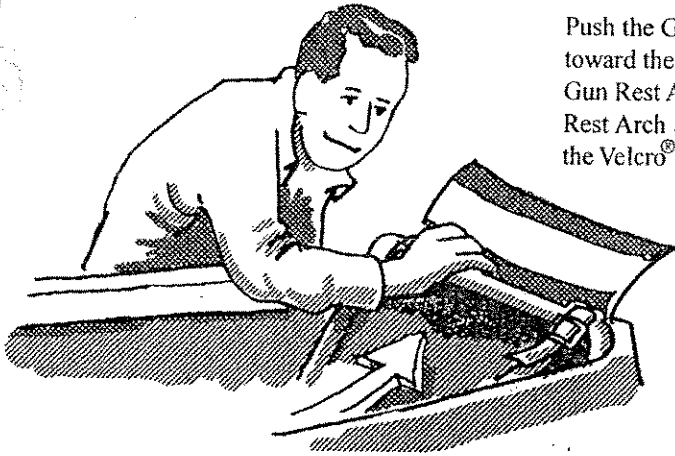



Adjustable Tension Straps

Inside the backrest compartment are two adjustable tension straps for extra support and comfort.

NOTE: Use the Nylon Adjustment Strap Lock to keep the 1" Web Hinge Strap taut. (one on each side of Head Rest)

Now your X-Land'r Hunting Blind is fully assembled and ready for use.


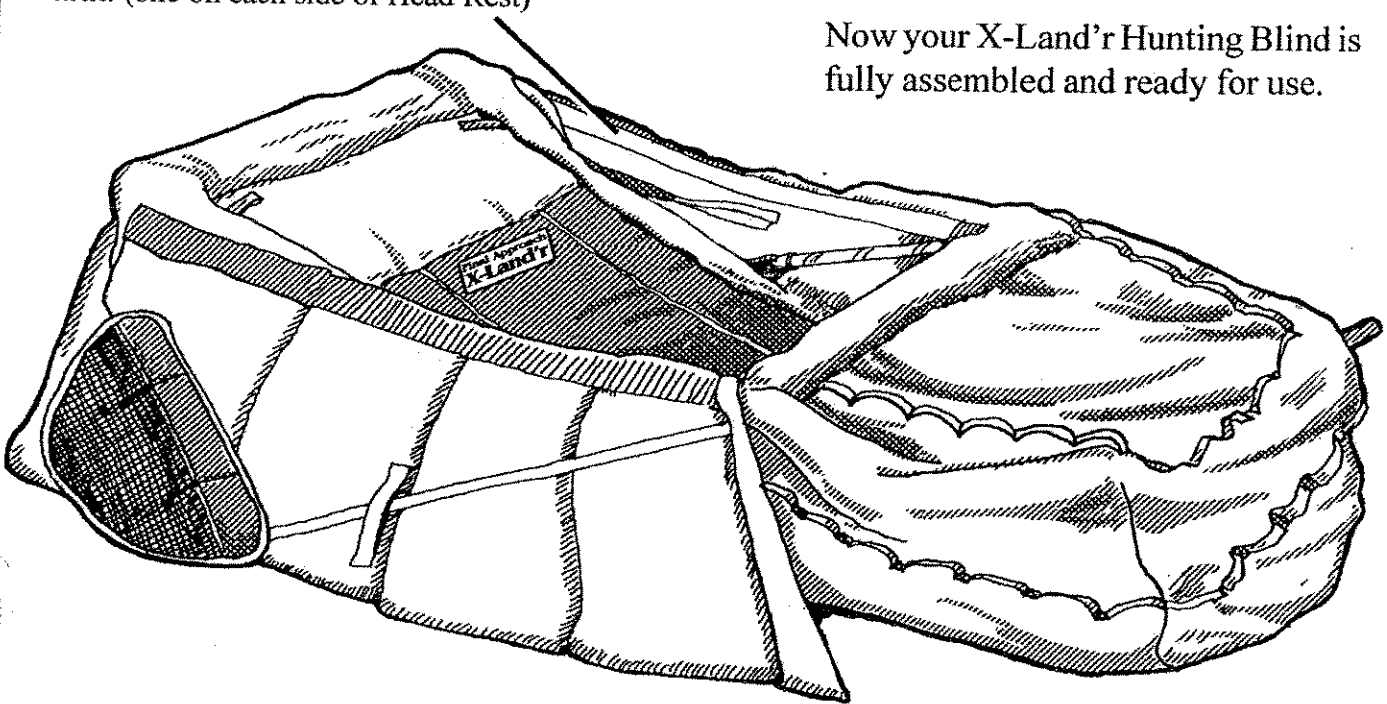


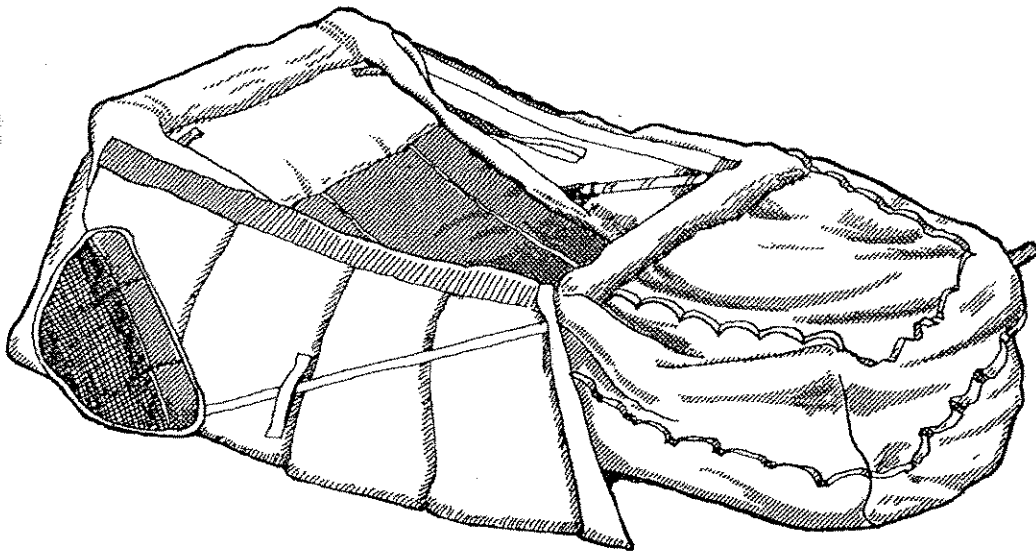

Note: Before using your "X-Land'r for the first time, we recommend getting the fabric dirty to permanently eliminate any shine that new fabric may have. We suggest the following simple procedure. With cover on erect blind, mix dirt and water in a bucket until it becomes a "mud-like substance. Apply to entire outside of cover with a broom, or with your hand. Let mixture dry on blind for approximately 2 hours. Rinse cover off with cold water only leaving a residue of dirt on the cover.

WASHING INSTRUCTIONS: Do Not Machine Wash or Dry!

Remove excess dirt and mud from fabric using brush and mild soap and then rinse, using cold water only, from garden hose. *Line Dry!*

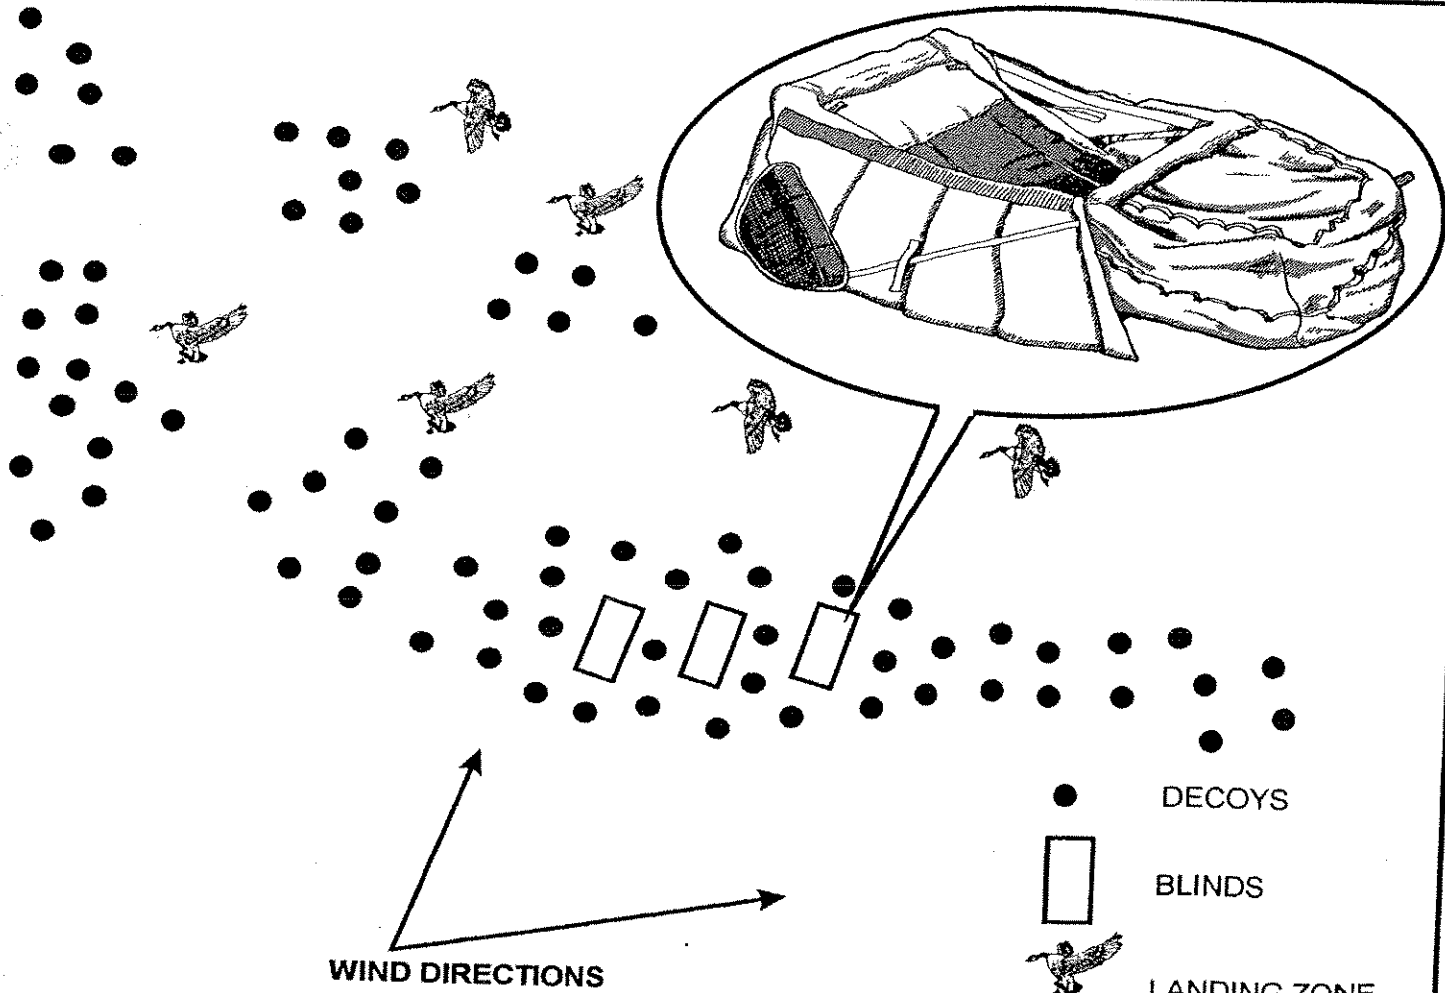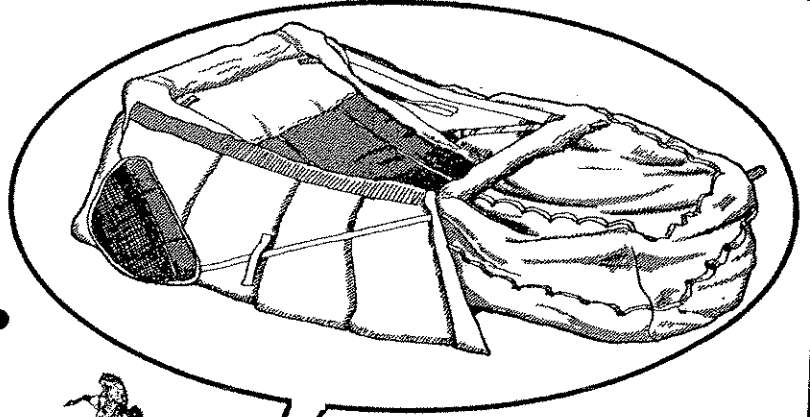

WIND DIRECTIONS

- DECOYS
- BLINDS
- 🐦 LANDING ZONE

Example: Blinds work best positioned within the decoy spread. Set farthest decoys a maximum distance of 25 yards from blinds.