




## Eliminator® Sport Utility Blind Instructions

*Congratulations on your purchase of the original and #1 choice of professional guides, The Final Approach® Eliminator® Blind.*

When you open the box to your new Eliminator Sport Utility Blind, the parts of the frame should be examined according to the diagram shown. Please be sure to note that all the parts are included in your blind. You will only need a Phillips head screwdriver for assembly.

### **Assembly:**

First, spread the blind cover out over the floor. Familiarize yourself with the different sections of the frame. You can now begin to assemble the frame. Attach the Gun Rest to the two floor sections as shown in diagram. The floor sections should attach using spring clips. The Gun Rest should attach using Phillips head screws.

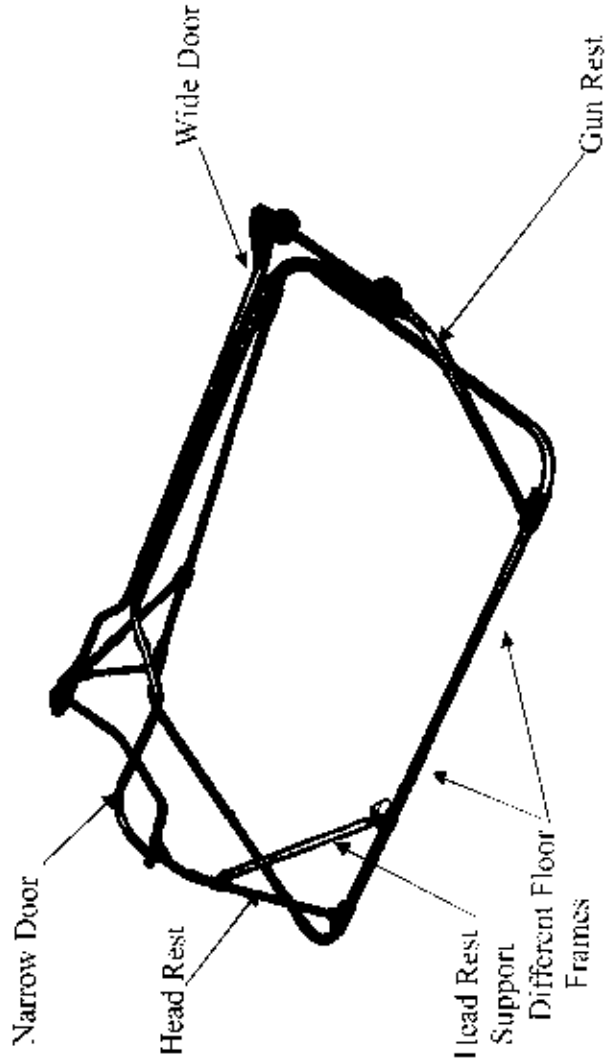

Attach the Head Rest to the remaining floor sections as shown. The floor sections should attach using spring clips. The Head Rest should attach using Phillips head screws.

You may attach the Head Rest supports to the floor sections using Phillips head screws.

Slide the Gun Rest assembly into the blind now. Do not Velcro it into place yet. Slide the Head Rest assembly into the blind. Make sure that both the assemblies are under the seat of the blind. Now you may attach the floor sections of the Head Rest assembly to the Gun Rest assembly using the spring clips.

Now that the four floor frame sections are together, you may position them in their proper locations in the blind. There should be one piece of Velcro on each side of the floor that will allow you to secure the floor sections into place.

Attach the door sections together as shown and slide them into the pockets of the blind. The narrow end should be near the Head Rest side and the wide end should be on the Gun Rest side.

Slide the webbing strap through the slits on the Head Rest. Leave plenty of slack for now.

*NOTE: This is what your Sport Utility Blind will collapse down to.*

#### **Blind Set-up:**

Grab your blind out of your SUV and place it where you plan to hunt. Begin set-up by attaching the Head Rest supports to the Head Rest using the U-shaped pin-locks. Using the remaining four pin-locks, attach the doors to the Head Rest and the Gun Rest. Now to stiffen the blind up, pull the slack out of the webbing so that the webbing supports the doors. Your blind is field ready. To collapse the blind, simply reverse the steps of the blind set-up.



**NOTE:** Before using your Sport Utility Blind for the first time, we recommend getting the fabric dirty to permanently eliminate any shine the new fabric may have. We suggest the following procedure. With cover on erected blind, mix dirt and water in a bucket until it becomes a mud-like substance. Apply to entire outside surface with a broom or your hand. Let the mixture dry on the cover for about 2 hours. Rinse off with COLD water only leaving a dirt residue on the blind.

**WASHING:** Do NOT machine wash or dry! Remove excess dirt and mud from fabric using a brush and mild soap and then rinse, using COLD water only, from a garden hose. Line Dry!

For additional assistance, please contact our customer service department at (877)-9KOLPIN or [customerservice@kolpin.com](mailto:customerservice@kolpin.com)